

Priming and Operation

1. Fill the pump body with water at the priming hole adjacent to the delivery outlet.
2. Replace priming plug and switch on.
3. Open gate valve in pump outlet to allow air from suction line to be expelled. With long suction lines it may be necessary to reprime the pump more than once.
4. Once prime has been established a strong flow of water out of the pump will be evident. Adjust valve to required flow rate.

Spear Point Installations

The pumping capacity of your Dynaprime may need to be adjusted to match the water supply available from your bore. This should be done by closing the gate valve in the pump outlet until the flow to the sprinklers is equal to the water available to the spear point.
Be sure to choose the correct spear point to suit your water supply.

Note: If this pump is allowed to continually pump water containing sand or other abrasive material, the effective life of the pump will be shortened.

Trouble Shooting Check List

- a) Motor runs when switched on but does not pump or pumps poorly
 1. Suction line and pump body not filled with water.
 2. Air leaks in suction lines or suction pipe not under water.
 3. Air trapped in suction lines (due to uneven rise in piping; eliminate humps and hollows).
 4. No water at source or water level too low.
 5. Valve on suction lines closed.
 6. Check valve installed in wrong direction.
 7. Suction lift too high.
 8. Blocked impeller.
- b) Motor doesn't start when switched on
 1. Power not connected.
 2. Supply voltage too low.
 3. "Over temperature" cut-out tripped.*
 4. Motor not free to turn eg a jammed impeller.
 5. Internal motor fault.

Note: For protection, the Davey pump motor is fitted with an automatic "over temperature" cut-out. Constant tripping of this overload device indicates a problem eg low voltage at pump, motor overloaded.

NOTE: For protection, the Davey pump motor is fitted with an automatic reset thermal overload, constant tripping of this overload indicates a problem e.g. low voltage at pump, excessive temperature (above 50°C) in pump enclosure.

WARNING: Automatic reset thermal overloads will allow the pump to restart without warning. Always disconnect the pump motor from the electrical supply before maintenance or repairs.

WARNING: When servicing or attending pump, always ensure power is switched off and lead unplugged. Electrical connections should be serviced only by qualified persons.

Care should also be taken when servicing or disassembling pump to avoid possible injury from hot pressurised water. Unplug pump, relieve pressure by opening a tap on the discharge side of the pump and allow any hot water in the pump to cool before attempting to dismantle.

IMPORTANT: DO NOT USE petroleum based fluids or solvents (e.g. Oils, Kerosene, Turpentine, Thinners, etc) on the plastic pump components or seal components.

WARNING: Do not use hydrocarbon based or hydrocarbon propelled sprays around the electrical components of this pump.

In accordance with AS 3350.2.41 we are obliged to inform you that this pump is not to be used by children or infirm persons and must not be used as a toy by children.

Davey® Repair or Replacement Guarantee

In the unlikely event in Australia or New Zealand that this Davey product develops any malfunction within two years of the date of original purchase due to faulty materials or manufacture, Davey will at our option repair or replace it for you free of charge, subject to the conditions below.

Should you experience any difficulties with your Davey product, we suggest in the first instance that you contact the Davey Dealer from which you purchased the Davey product. Alternatively you can phone our Customer Service line on 1300 367 866 in Australia, or 0800 654 333 in New Zealand, or send a written letter to Davey at the address listed below. On receipt of your claim, Davey will seek to resolve your difficulties or, if the product is faulty or defective, advise you on how to have your Davey product repaired, obtain a replacement or a refund.

Your Davey Two Year Guarantee naturally does not cover normal wear or tear, replacement of product consumables (i.e. mechanical seals, bearings or capacitors), loss or damage resulting from misuse or negligent handling, improper use for which the product was not designed or advertised, failure to properly follow the provided installation and operating instructions, failure to carry out maintenance, corrosive or abrasive water or other liquid, lightning or high voltage spikes, or unauthorized persons attempting repairs. Where applicable, your Davey product must only be connected to the voltage shown on the nameplate.

Your Davey Two Year Guarantee does not cover freight or any other costs incurred in making a claim. Please retain your receipt as proof of purchase; you MUST provide evidence of the date of original purchase when claiming under the Davey Two Year Guarantee.

Davey shall not be liable for any loss of profits or any consequential, indirect or special loss, damage or injury of any kind whatsoever arising directly or indirectly from Davey products. This limitation does not apply to any liability of Davey for failure to comply with a consumer guarantee applicable to your Davey product under the Australian or New Zealand legislation and does not affect any rights or remedies that may be available to you under the Australian or New Zealand Consumer Legislation.

In Australia, you are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Should your Davey product require repair or service after the guarantee period, contact your nearest Davey Dealer or phone the Davey Customer Service Centre on the number listed below.

For a complete list of Davey Dealers visit our website (davey.com.au) or call:



AUSTRALIA
Customer Service Centre
 6 Lakeview Drive,
 Scoresby, Australia 3179
 Ph: 1300 232 839
 Fax: 1300 369 119
 Email: sales@davey.com.au
 Website: davey.com.au
 ABN 18 066 327 517

NEW ZEALAND
Customer Service Centre
 7 Rockridge Avenue,
 Penrose, Auckland 1061
 Ph: 0800 654 333
 Fax: 0800 654 334
 Email: sales@dwp.co.nz
 Website: daveynz.co.nz

© Davey is a registered trademark of Davey Water Products Pty Ltd. © Davey Water Products Pty Ltd 2016. P/N:47727-7

* Installation and operating instructions are included with the product when purchased new. They may also be found on our website.



Installation and Operating Instructions for Dynaprime X201 Electric Pumps



NOTE: Prior to installation remove the red transport plugs & associated seals from the suction and/or discharge ports.

WARNING: Failure to follow these instructions and comply with all applicable codes may cause serious bodily injury and/or property damage.

Please pass these instructions on to the operator of this equipment.

Prior to using this pump you must ensure that:

- The pump is installed in a safe and dry environment
- The pump enclosure has adequate drainage in the event of leakage
- Any transport plugs are removed
- The pipe-work is correctly sealed and supported
- The pump is primed correctly
- The power supply is correctly connected
- All steps have been taken for safe operation


Appropriate details for all of these items are contained in the following Installation and Operating Instructions. Read these in their entirety before switching on this pump. If you are uncertain as to any of these Installation and Operating Instructions please contact your Davey dealer or the appropriate Davey office as listed on the back of this document.

Congratulations on your purchase of a high quality, Australian built Davey pump. All components have been designed and manufactured to give trouble free, reliable operation.

Before installing your new pump, please read all instructions carefully as failures caused by incorrect installation or operation are not covered by the guarantee. Your Dynaprime X201 is designed to handle water containing soft solids to 10mm. It should not be used for any other purpose without specific referral to Davey. The use of the pump to handle flammable, corrosive and other materials of a hazardous nature is specifically excluded.

DYNAPRIME X201


1. Priming Plug
2. Drain Plug
3. Suction Inlet (1/4" BSPF)
4. Pump Body
5. Delivery Outlet (1/4" BSPF)
6. Motor

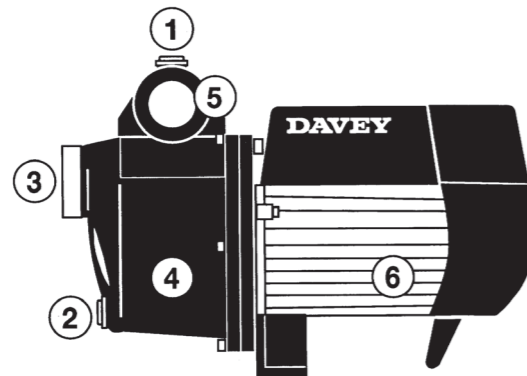

Do not use pipe thread sealing compound on any part of this pump. ONLY use teflon thread sealing tape.

Choosing a Site


Choose a site with a firm base and as close to the water source as possible with correct power supply. Make sure your Dynaprime pump is always connected to an adequate, reliable source of water.

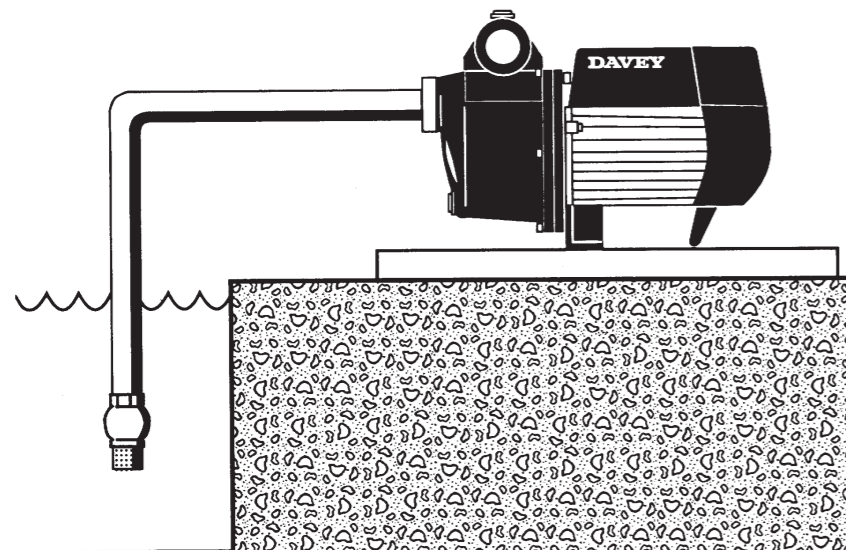

Housing your Pump

To protect your pump from the weather, make sure the cover provided is both water proof, frost free and has adequate ventilation.

The pump should be horizontally mounted on a firm dry base allowing for drainage, to avoid damage to flooring

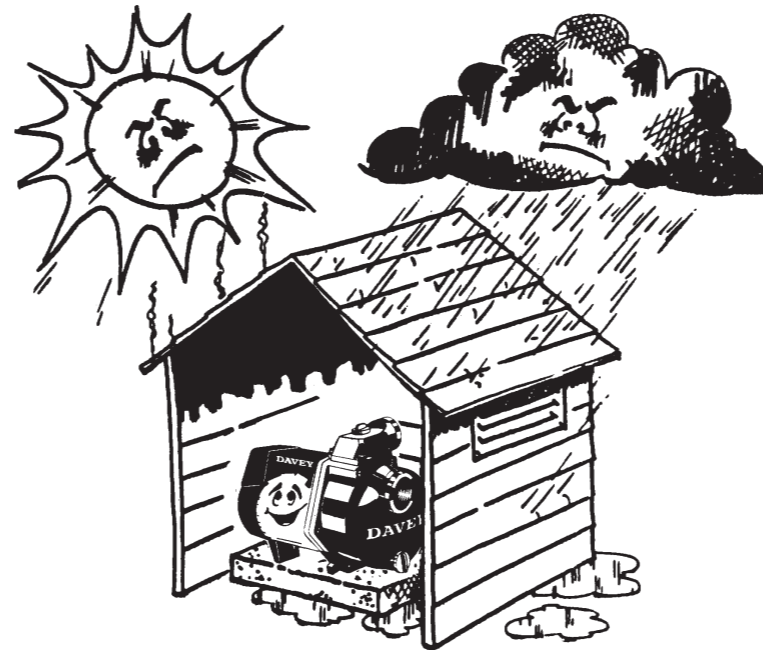

WARNING: Some insects, such as small ants, find electrical devices attractive for various reasons. If your pump enclosure is susceptible to insect infestation you should implement a suitable pest control plan.

Power Connections and Wiring must be carried out by an authorised electrician.

Connect lead to power supply designated on pump label, do not use long extension leads as they cause substantial voltage drop, poor pump performance and may cause motor overload.

Type of Piping to be used

It is recommended that polythene piping be used for the pump suction and the delivery lines immediately adjacent to the pump. PVC piping may be used as an alternative to polythene pipe, however, unions should be used with PVC pipe so that the pump may be removed without cutting the piping.

Connection to your Water source

As your Davey Dynaprime pump has an inbuilt check valve, no external check valve or foot valve is required. (On some suction lifts it may be advisable to fit a foot valve to assist with priming. With a foot valve installed at the bottom of the suction pipe, it may be beneficial to incorporate a "priming tee" in the suction pipework adjacent to the pump to aid in initial priming of the suction line).

Installation of a suction strainer is recommended to prevent large items of foreign matter entering the pump. The suction strainer should have sufficient area so as to not restrict the water flow to the pump. Ensure that the strainer on the end of the suction pipe does not rest in debris or mud at the bottom of your water source as (B) opposite.



Suction Piping

Suction piping should be laid so there is a constant rise from the water source to the pump. Any high spots will cause pockets of air to form which may reduce the efficiency of the system. For best performance use pipe of at least the same diameter as the pump's inlet.

Spear Point Installations

When installing a Dynaprime on a spear or well point as (A) right, a check valve immediately above the spear will greatly assist pump operation (when re-priming).

The Pump may require "topping-up" with water at initial priming after the trapped air in the suction pipe between pump and water level is pumped out.

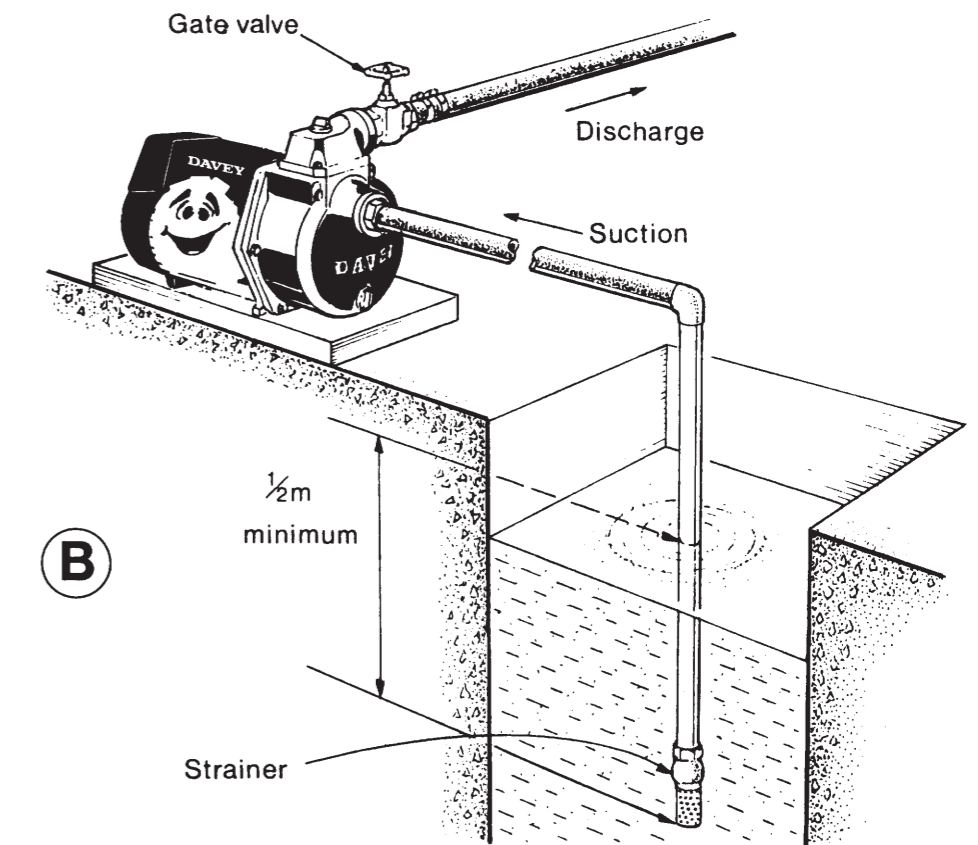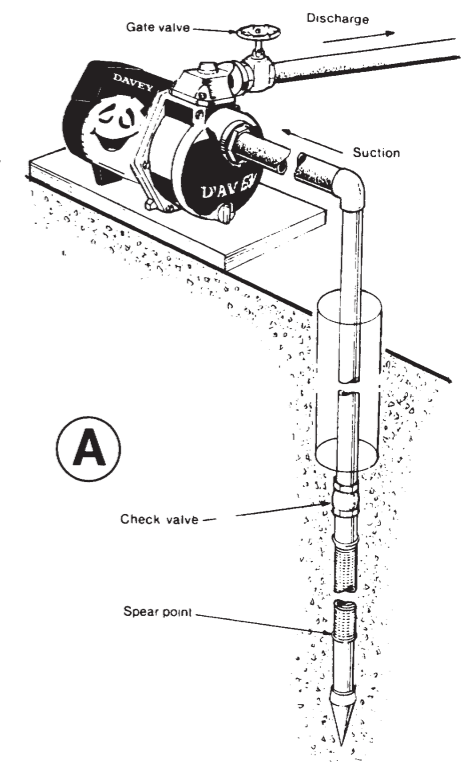

Note: Suction leaks are the largest cause of poor pump performance and are difficult to detect. Ensure all connections are completely sealed using thread tape only.

Connection of Outlet Pipework to Pump

To control the flow of water from the pump it is recommended that a gate valve be installed on the pump outlet - this is particularly advisable when there is a possibility of the pump delivering water at a faster rate than may be available at the source (e.g. spear point, spring, well etc.). Use thread tape at all times and do not over-tighten fittings. For best performance use pipe of at least the same diameter as the pump outlet.